


# How to use your Spacer Block

READ CAREFULLY THROUGH THESE INSTRUCTIONS BEFORE YOU START

If you have any query please telephone our Customer Services Department during normal office hours on 0114 2510570, who will deal with your problem immediately.  
**One Spacer Block fills a gap of 15mm.**  
**Each additional Spacer Block adds 9mm.**  
**Example:**  
**5 BLOCKS fills a gap of 15mm + 4 x 9mm = 51mm 2"**


## POSITIONING YOUR SPACER BRACKETS

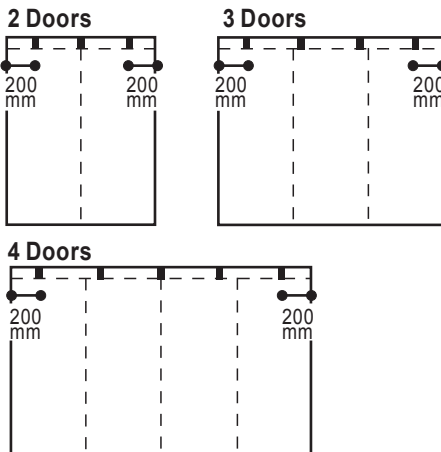

**Folding Doors only** - You will require a wooden batten to link **Blocks** onto which the top track is attached.


## FIXING SPACER BLOCKS TO CEILING WALLS OR FLOOR

**1** Position first **Spacer Block** as shown. Drill and plug the ceiling, wall or floor as required and fix with No.8 screws to suit plugs.

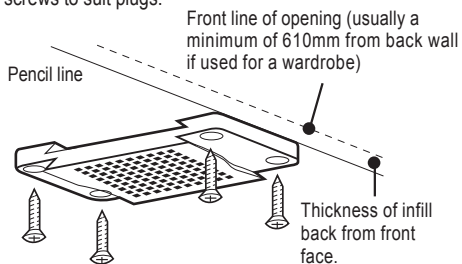


4320-INST (Issue 4) Nov 00

**2** Slide second **Spacer Block** over first.

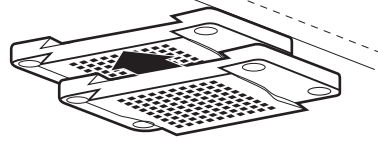


**3** Fit as many **Spacer Blocks** as required.

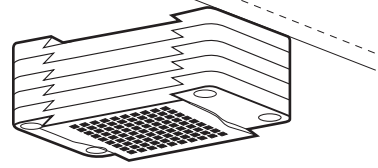


## FIXING TOP TRACKS

### SLIDING DOORS

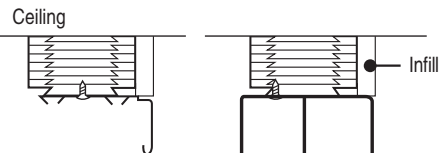

### FOLDING DOORS

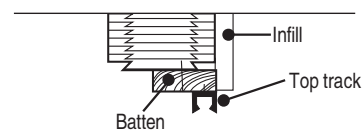

## FIXING AN END FILLET

Fit the end fillet directly to the front of the **Spacer Blocks**. The infill panel can be fixed either by screwing directly through the face into the blocks, or by double sided foam adhesive tape or fixing blocks from the rear.

