




How to upgrade you standard sliding doors to Made to Measure/Soft Close Specification:

1. IMPORTANT – Build your opening height to 2275mm

(Normal standard doors are for an opening of 2260mm, but soft close requires an extra 15mm)

2. Remove the white top guides from the metal housing

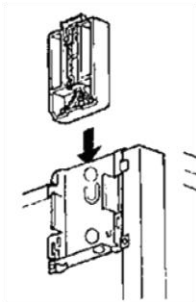


- Slide white guide out of housing until it stops against an internal metal tab (which can be seen through the plastic guide)
- Using a small flat screwdriver, push the metal tab a couple of mm, to allow the white guide to slide out completely (being careful that the screwdriver does not slip through and damage the door)
- Using same small screwdriver, prise the metal tab back a couple of mm into position

3. Insert upgrade guides into the metal housings

- The 2 wheel version is designed to accept the soft close unit, so this should go on the side of the door that closes (against the wall). The 3 wheel version goes on the opposite corner.

4. If supplied, replace bottom wheel with the higher spec version

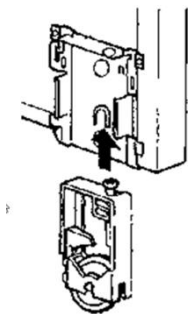

- If your doors are 914mm glass, they will already have the correct bottom wheels. If not, you will have been supplied with new bottom wheels. Remove old in the same way that you removed the white top guides

5. Fit Soft Close according to the instructions supplied in the pack.