



# SlidingWardrobeWorld


The World of Sliding Wardrobes Delivered to Your Door

## HOW TO UPGRADE YOUR STANDARD SLIDING DOORS TO MADE TO MEASURE/SOFT CLOSE SPECIFICATION:

**IMPORTANT – Build your opening height to 2275mm -**


**(Normal standard doors are for an opening of 2260mm but soft close requires an extra 15mm)**

- 1) Remove the top guides from the metal housing:

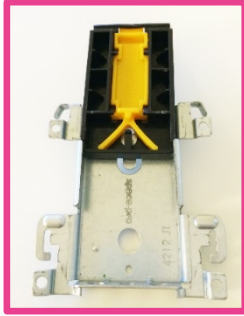

- Slide the guide out of the metal housing until it stops against an internal metal tab (which can be seen through the plastic guide).
- Using a small flat screwdriver, push the metal tab a couple of millimetres to allow the guide to slide out completely (being careful that the screwdriver does not slip through and damage the door).
- Using same small screwdriver, prise the metal tab back a couple of millimetres into position.

- 2) Insert the upgrade guides into the metal housings:

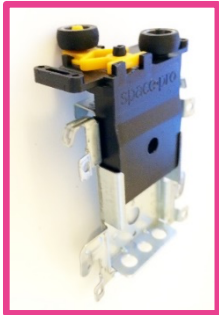

- 3) If supplied, replace bottom wheel with the higher spec version

If your doors are 914mm glass, they will already have the correct bottom wheels. If not, you will have been supplied with new bottom wheels. Remove the old in the same way that you removed the top guides and replace with the new ones provided:



- 4) Fit the soft close units according to the instructions supplied in the pack.

- For lighter 610mm wide MFC doors (weighing up to 15kg), please use the USC015 soft-close units.
- For heavier 914mm, 762mm and 610mm width MFC/glass/mirror doors (weighing up to 25kg), please use the USC025 soft-close units.

Any questions, please call us on 0208 123 8686 or email [info@slidingwardrobeworld.com](mailto:info@slidingwardrobeworld.com).

**IF you have been sent two track sets**, please ensure you use the E-Track and not the standard J-Track set, which you can dispose of. This is because when upgrading to soft close, you need to use an upgraded track set: <https://slidingwardrobeworld.com/information/technical-specifications/made-to-measure-technical-specifications/>