

## Custom-Made Size Angled Doors – Order Information Required


For an angled sliding door, we will require the following measurements:

- Overall Height
- Overall Width
- Top Width
- Short Height
- Sloped Edge Length
- Angle A
- Angle B


Please deduct the thickness of any end panels or liners that you intend to use before providing these dimensions.

A drawing will be provided for approval before manufacture

Extended lead time of 4-5 weeks applies

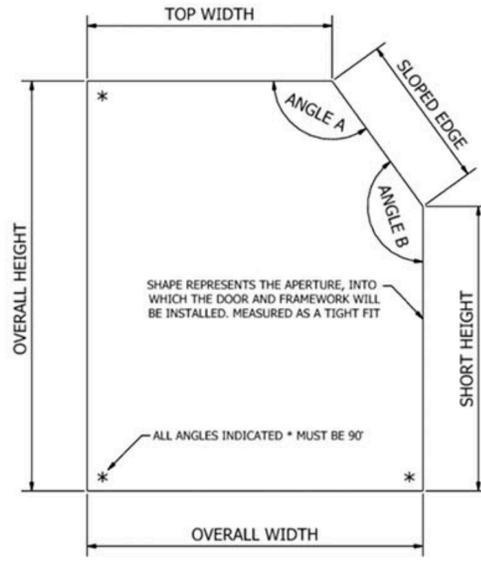

FOR DOORS WHERE NO PART OF THE DOOR IS LOCATED IN THE TOP TRACK (WHERE YOU HAVE MORE THAN ONE ANGLED DOOR)

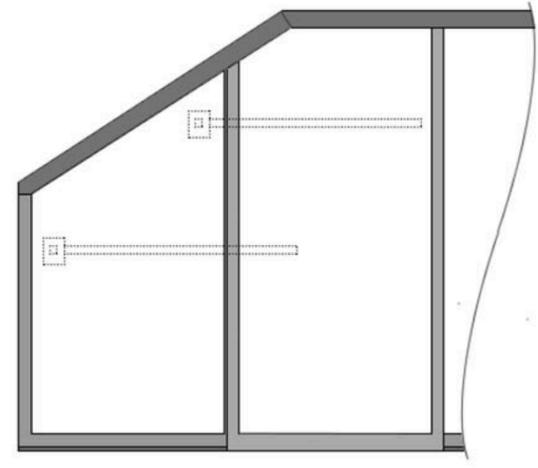

### Installation advice:

1. Cut and install top track on ceiling and down slope of ceiling
2. Cut and install track for floor
3. Cut shelf tracks if required. Preferably 80mm wider than door
4. Shelf tracks can be fitted to shelves in 1 of 2 ways (see images)
5. Position Guide Arm Bracket using spirit level as shown
  - A.  $x = 14\text{mm}$  when fixing to shelf front
  - B.  $x = 33\text{mm}$  when fixing under shelf
6. Fix guide bracket to door frame using 2 screws
7. 78mm guide arm can be cut to length
8. Offer door up to tracks as shown

